



Smart Digital Key+

HOW TO SET UP YOUR DIGITAL KEY

(VEHICLE EQUIPPED WITH TOYOTA CONNECT)

YOUR KEY, REINVENTED

Unlock, start, and share your Toyota using just your smartphone. No need for a physical key – enjoy keyless access anytime, anywhere.



SECURE

Phone's authentication and passcode.



SHAREABLE

Up to 7 users.



CONVENIENT

Always with you.



BACKUP

Include NFC card.

GETTING STARTED



MyToyota App.



Wallet App (Apple Wallet/Google Wallet).



Toyota account with Connected Services activated.



Key fob or NFC card in the car for first activation.

DIGITAL KEY SET UP OPTIONS

A. VIA MYTOYOTA APP



Sit in your car with your key fob or NFC card (Bluetooth and network on).

Open the MyToyota app then select "Set Up Digital Key."



Tap "Next" and follow the pairing steps.

**If using the key fob for set-up, this step will not appear.*



When prompted, tap "Add to Wallet" then "Continue".

Set up complete!
You can now use your phone to lock, unlock, and start your car.







B. VIA TOYOTA MULTIMEDIA

1. Go to Settings → Vehicle → Doors/Locks/Keys → Keys → Select "Set Up Digital Key".
2. Hold your device against the card reader when prompted.
3. Follow the on-screen steps on both the vehicle display and your phone.
4. Tap "Add Key to Wallet" and enter the pairing code emailed to the registered account.

Set up complete!

Your phone now acts as your car key.

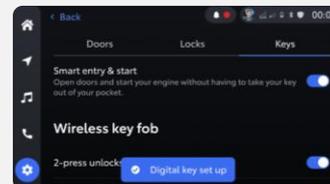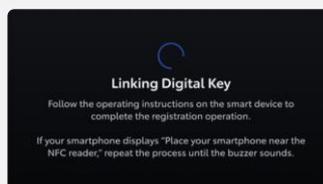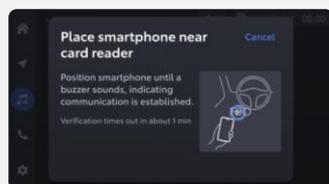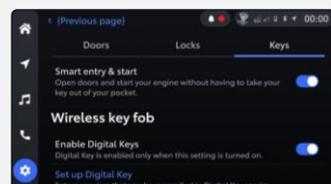



Smart Digital Key+

MANAGE, SHARE & USE YOUR DIGITAL KEY

(VEHICLE EQUIPPED WITH TOYOTA CONNECT)

PHONE WALLET MANAGEMENT

✓ You can manage, delete, or share your digital key via your Wallet settings.

✓ Visit [Apple Wallet Guide](#) or [Google Wallet Guide](#):



Apple Wallet



Google Wallet

ⓘ Tip: You can share your key with up to 6 additional users via your phone's wallet.

HOW TO SHARE YOUR DIGITAL KEY



Open your Toyota Digital Key in your phone's wallet app.



Tap Share Car Key (top right on iPhone, bottom right on Android).



Choose how you want to share it (AirDrop, Messages, WhatsApp, etc.) and select the recipient.



Confirm access settings, tap Continue, and share the activation code separately.



You'll return to the wallet home screen once sharing is complete.

HOW TO ACCEPT A SHARED KEY

Receive invitation via SMS or email from the vehicle owner.

Tap the link → open in your phone's wallet app.

Follow the same setup steps to add the shared key to your Wallet.

You can now lock/unlock and start the car as a Guest User.

ⓘ Owner can remove or limit your access anytime via the app.

GOOD TO KNOW: HOW IT WORKS

Your phone uses multiple technologies to connect securely to your car:



UWB (ULTRA-WIDEBAND):

Hands-free access – no need to take your phone out of your pocket or bag (providing your device is compatible).



NFC (NEAR FIELD COMMUNICATION):

Unlock/start by holding your phone near the driver's door handle (works even with low/dead battery mode – just ensure NFC express mode is enabled on your phone).



BLE (BLUETOOTH LOW ENERGY):

Maintains connection when nearby for quick access.



Your Smart Digital Key automatically chooses the best available technology to keep you connected – even if your phone's battery is depleted.